



# Asus X200MA Battery Replacement

A few screws and your battery is out.

Written By: Vanessa Garcia



## INTRODUCTION

If your battery is giving you a hard time on your laptop, follow this guide.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Panel



- Remove the following six screws:
    - Six 4 mm Phillips #0 using a phillips screddriver
  - Remove the following one screw:
    - One 14 mm Phillips #0 using a phillips screwdriver
- ☒ The 14mm screw goes in the center.

## Step 2



- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

## Step 3 — Battery



- Take two rubber caps off the back side of the laptop.

## Step 4



- Remove the following two screws under the rubber caps.
- Two 14 mm screws using the Phillips #0 screw driver.




## Step 5



- Remove the following screws from the inside of the laptop:
  - Two 4 mm screws using Phillips #0 phillips screwdriver.
  - One 5 mm screw using Phillips #0 phillips screwdriver located in the center a little below the battery.

## Step 6

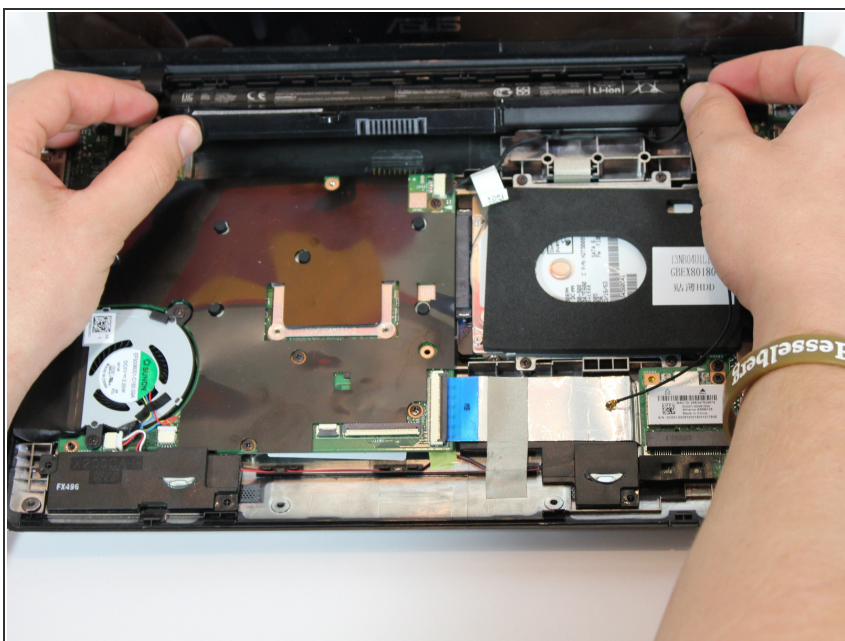

- Slide the battery up and out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 11:04:27 AM.